


INSTRUCTION MANUAL MANUAL DE INSTRUCCIONES

Model Number / No. de Modelo: W892F

WASHING MACHINE LAVADORA

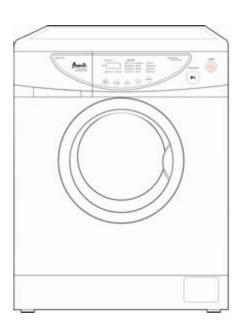

BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS.

La sección en español empieza en la página 21.

Avanti has a policy of continuous improvement on its products and reserves the right to change materials and specifications without notice.

Avanti Products, A Division of the Mackle Co., Inc. P.O. Box 520604- Miami, Florida 33152 www.avantiproducts.com

REGISTRATION INFORMATION

Thank you for purchasing this fine Avanti product. Please fill out this card and return it within 100 days of purchase and receive these important benefits to the following address:

Avanti Products, A Division of the Mackle Co., Inc. P.O. Box 520604 - Miami, Florida 33152 USA

Protect your product:

We will keep the model number and date of purchase of your new Avanti product on file to help you refer to this information in the event of an insurance claim such as fire or theft.

Promote better products: We value your input. Your responses will help us develop products designed to best meet your futureleds.					
		`	,		
		Avanti k	Registration Card		
Name			Model #	Serial #	
Address			Date Purchased	Store/Dealer Name	
City	State	Zip	Occupation		
Area Code	Phone Nu	mber		Residence, Do You: Rent	
		ditional Warranty:	Your Age:		
			Gender 18 General Gen		
Reason For Choosing This Avanti Product:			€31-35 €36-50 €over 50		
Please indicate the most important factors that influenced your decision to purchase			Marital Status:		
	ed your decision	on to purchase			
this product. ☞Price			Is This Product Used In The: ———————————————————————————————————		
জি Price জProduct Features			How Did You Learn About This Product:		
Froduct reatures✓ Avanti Reputation			Advertising	II About Tills I Toddot.	
Product Quality			•		
Salesperson Recommendation					
Friend/Relative Recommendation			Comments		

HELP US HELP YOU...

Read this guide carefully.

It is intended to help you operate and maintain your new washing machine properly.

Keep it handy to answer your questions.

If you don't understand something or you need more assistance, please call:

Avanti Customer Service 800-220-5570

Keep proof of original purchase date (such as your sales slip) with this guide to establish the warranty period.

Write down the model and serial numbers.

You'll find them on a plate located on the rear outside wall of the washing machine.

Please write these numbers here:

Date of Purchase

Model Number

Serial Number

Use these numbers in any correspondence or service calls concerning your washing machine.

If you received a damaged washing machine, immediately contact the dealer (or builder) that sold you the washing machine.

Save time and money. Before you call for service, check the Troubleshooting Guide. It lists causes of minor operating problems that you can correct yourself.

IF YOU NEED SERVICE

We're proud of our service and want you to be pleased. If for some reason you are not happy with the service you receive, here are some steps to follow for further assistance.

FIRST, contact the people who serviced your washing machine. Explain why you are not pleased. In most cases, this will solve the problem.


NEXT, if you are still not pleased, write all the details, including your telephone number, and send it to:

Customer Service Avanti Products 10880 NW 30 Street Miami, FL 33172 USA

TABLE OF CONTENTS

REGISTRATION INFORMATION	2
HELP US HELP YOU	4
PARTS & FEATURES	6
IMPORTANT SAFETY INSTRUCTIONS	7
INSTALLATION INSTRUCTIONS	7
BEFORE USING YOUR APPLIANCE	7
SELECTING A LOCATION	8
ADJUSTING THE LEVELING LEGS	8
REMOVING THE SHIPPING BOLTS	8
CONNECTING THE WATER SUPPLY HOSE	8
WATER CONNECTION	9
POSITIONING THE DRAIN HOSE	10
ELECTRICAL CONNECTION	10
OPERATING YOUR APPLIANCE	11
CONTROL PANEL	11
PREPARATION	12
OPERATING INSTRUCTIONS	13
DELAY START SETTING	14
WASHING TIPS AND HINTS	15
CARE AND MAINTENANCE	16
CLEANING YOUR APPLIANCE	16
VACATION TIME	17
TROUBLESHOOTING GUIDE	17
SERVICE FOR YOUR APPLIANCE	18
YOUR AVANTI PRODUCTS WARRANTY	19
WIRING DIAGRAM	20
INSTRUCCIONES EN ESP AÑOL	21~31


PARTS & FEATURES

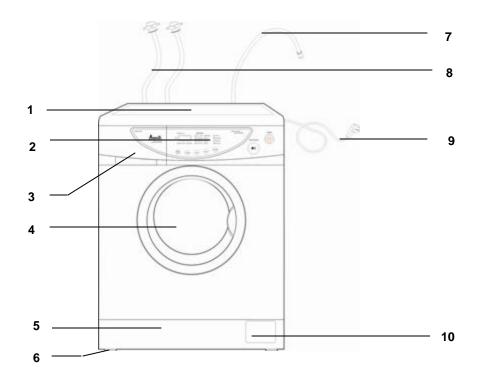

- 1. WORKTOP
- 2. CONTROL PANEL
- 3. DETERGENT DRAWER
- 4. DOOR
- 5. BASE COVER
- 6. LEVELING LEGS

- DRAIN HOSE (1 PC)
 INLET HOSE (2 PCS)
 POWER SUPPLY CORD
- 10. PUMP FILTER COVER

ACCESSORIES

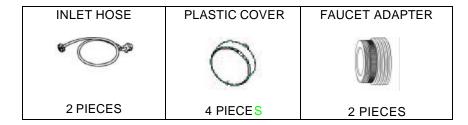

IMPORTANT SAFETY INSTRUCTIONS

₩ARNING

To reduce the risk of fire, electrical shock, or injury when using your portable washer, follow these basic precautions:

- ? Read all instructions before using the appliance.
- ? Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
- ? Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
- ? Under certain conditions, hydrogen gas may be produced in a hot-water system that h as not been used for 2 weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot-water system has not been used for such a period, before using a washing machine, turn on all hot-water faucets and let water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- ? **DANGER or WARNING:** Risk of child entrapment. Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous . . . even if they will "just sit in the garage a few days."
- ? Before you throw away your old portable washer: Take off the lid.
- ? Never allow children to operate, play with, or crawl inside the portable washer. Close supervision of children is necessary when the washer is used near children.
- ? Do not reach into the washer if the agitator or tub is moving.
- ? Do not install or store this appliance where it will be exposed to the weather.
- ? Do not tamper with controls.
- ? Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- ? Never clean portable washer parts with flammable fluids. The fumes can create a fire hazard or explosion.
- ? Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.
- ? Do not store, use gasoline, or any other flammable vapors and liquids in the vicinity of this or any other portable washer. The fumes can create a fire hazard or explosion.
- ? If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

-Save these instructions -

INSTALLATION INSTRUCTIONS

BEFORE USING YOUR APPLIANCE

- ? Remove the exterior and interior packing.
- ? You will need the following tools:
 - ? Wrench
 - ? Pliers
 - ? Phillips Head Screwdriver
- ? Check to be sure you have all of the following parts:
 - ? 2 Inlet Hoses
 - ? 2 Faucet Adapters
 - ? 4 Plastic Covers
 - ? 1 Instruction Manual
- ? Clean the interior surface with lukewarm water using a soft cloth.
- ? Allow 2 inches of space between the back and sides of the appliance.



- ? Put your laundry into the washer evenly. Uneven laundry may cause noise or vibration.
- ? Don't use excessively hot water (50°C or more). Plastic parts may be deformed or damaged. Also, clothing may be deformed or bleached.
- ? Before washing, check all pockets. If nails or pins remain in pockets, they may damage the washer or clothes.
- ? Never splash water on the control panel.
- ? Plug the washer into an exclusive properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized Avanti Products service center.

⋈SELECTING A LOCATION

Before you install the washing machine, select a location with the following characteristics:

- ? A hard level surface (if the surface is uneven, see Adjusting The Leveling Legs).
- ? Away from direct sunlight. Direct sunlight may affect the acrylic coating, plastic and electrical components.
- ? Adequate ventilation.
- ? Room temperature that will not fall below 0? .
- ? Away from sources of heat such as coal or gas. Make sure that the washing machine does not stand on its power cord. Ventilation openings must not be obstructed by carpeting when the portable washer is installed on a carpeted floor.


ADJUSTING THE LEVELING LEGS

If the floor is uneven adjust the legs (do not insert pieces of wood, or any other objects under the feet) as following:

- ? Loosen the leg bolt by turning it with your hand until it is at the desired height.
- ? Tighten the locking nut by turning it in the reverse direction with the wrench.

Place the washer on a sturdy flat surface.

If the washer is placed on an uneven or weak surface, noise or vibration occurs (Allowable is 1 $^{\circ}$).

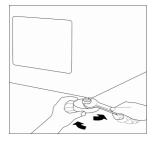

REMOVING THE SHIPPING BOLTS

For transportation reason, the suspended part located inside the washing machine is locked by four shipping bolts and screws. Before using the washing machine, remove the four shipping bolts as following:

- ? Loosen all bolts with the wrench before removing them.
- ? Take each bolt head and pull it out. Repeat for each bolt.
- ? Fill the holes with the supplied plastic covers.
- ? Keep the shipping bolts for future use.




CONNECTING THE WATER SUPPLY HOSE


The water supply hose must be connected to the washing machine at one end and to the water faucet at the other. Do not stretch the water supply hose. If the hose is too short and you do not wish to move the water faucet, replace the hose with a longer, high-pressure hose.

Select appropriate faucet as shown in the figures below. If none of these faucets are available, use the faucet adapter provided.

The end of faucet spout should be longer than 10mm (0.4"), or the connector cannot be fixed properly. Water leakage could develop.

- ? Connect the water inlet hoses to the connectors in water inlet valves by turning the connecting nuts.
- ? Connect the other ends of water inlet hoses to the faucets by turning the connecting nuts.
- ? If you have both cold and hot water supplied, please make sure to connect the inlet hoses by cold to cold and hot to hot.

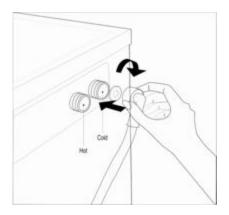

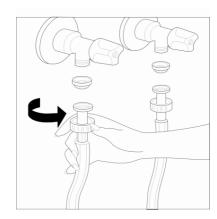

NOTE: Be sure the rubber rings are inside the connecting nuts.


WATER CONNECTION

For normal kitchen-sink tap only use the inlet hose with cold water inlet.

Connect the inlet hose to the male hose thread adapter by turning it clockwise to be fixed tightly.

Make sure to insert the rubber ring enclosed. Then connect tightly to your sink.

Note: Some faucets may require you to also use the female hose thread adapter between the male adapter and your sink faucet as shown below. Make sure the rubber ring is inserted and connect to your sink.

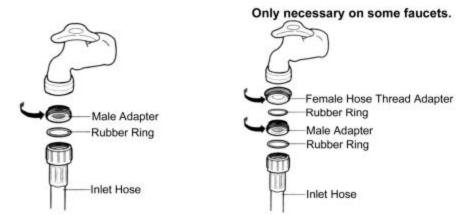

If water leaks from faucet connection or washer connection, turn off water and tighten fully using a wrench. Be careful not to over tighten and damage water connection. Turn on water supply and make sure no leaks are present.

POSITIONING THE DRAIN HOSE

The end of the drain hose may be positioned as following two ways:

? Over the edge of a sink

The drain hose must be placed at a height of between $0.6 \sim 0.9$ m. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the

faucet with a piece of string to prevent the drain hose from moving.

? In a drain pipe

We recommend you use a vertical pipe with height between $0.6 \sim 0.9$ m. The inside diameter of the drain pipe must be larger than the outside diameter of the drain hose.

NOTE The outlet of the drain hose must be in the height of $0.6 \sim 0.9$ m above floor level, otherwise, the washing machine cannot work normally.



ELECTRICAL CONNECTION

Warning

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized Avanti Products service center.

This portable washer should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.


Do not under any circumstances cut or remove the third ground prong from the power cord supplied.

This appliance requires a standard 110-120 Volts~A.C./60Hz electrical outlet with three-prong ground.

The cord should be secured behind the appliance and not left exposed or dangling to prevent accidental injury.


Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.

Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

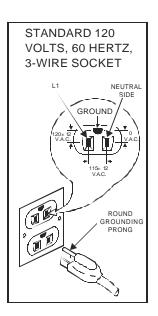

OPERATING YOUR APPLIANCE

CONTROL PANEL

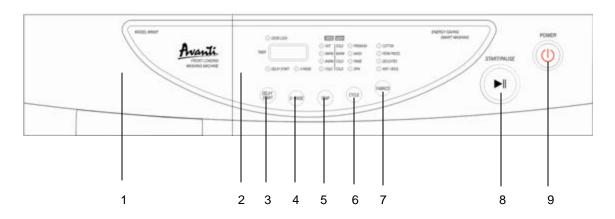


- 1. Detergent Dispenser
- 2. Display Panel
- Delay Start Selection Button
 Extra Rinse Selection Button
- 5. Water Temperature Selection Button
- 6. Cycle Selection Button7. Fabrics Selection Button
- 8. Start/Pause Selection Button
- 9. Power Selection Button

PREPARATION

- Connect the water inlet hose to the water faucet. Don't switch on the power if the water pressure is lower than 0.05MPa and higher than 0.5MPa.
- 2. Open the water faucet.



 Insert the plug into the socket. For safety the plug should have ground connection.

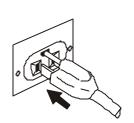

- 4. Place the drain hose in the correct position.
- Open the door and put the wash load into the tub evenly. Then close the door.

- 6. Pull out the detergent drawer and add the wash detergent and softener to the corresponding position as following:
 - ? For pre-wash detergent
 - ? For wash detergent
 - ? For softener

When using the liquid detergent (recommended for programs without pre-wash process), insert the detergent cup and follow the instructions on the package.



When using the soap powder, remember to remove the liquid detergent cup.



NOTE: DO NOT overflow the detergent and softener compartment.

Push back the detergent drawer.

WARNING: DO NOT pull out the detergent drawer while the appliance is in operation because this may cause water to spill out.



◆ Warning ◆

When using liquid chlorine bleach you must follow these steps. Failure to follow these directions may result in damaged clothes.

- 1. Insert the load to be washed into the unit
- 2. Turn on the unit to your desired mode.
- 3. Add dete rgent or liquid soap (see page 12 for details).
- 4. Wait for 3 minutes after the washing cycle starts. Then measure the correct amount of liquid chlorine bleach (do not exceed 1/3 cup) otherwise you will damage the clothes.
- 5. Open the drawer and pour the liquid chlorine bleach into center section 2 of drawer

6. Do not pour undiluted liquid bleach directly into the load or drum.

∠ OPERATING INSTRUCTIONS

PRESS DOWN POWER BUTTON.

Press once to turn the washing machine ON, press again to turn the washing machine OFF. After the washing program has been finished, the power will automatically turn off.

NOTE: If the power is left ON for longer than 10 minutes without any buttons being touched, the power will turn off automatically.

PRESS DOWN FABRICS BUTTON.

Choose the right available program according to wash load as following:

COTTON → PERM PRESS → DELICATES → KNIT/WOOL

The default Fabrics is Perm Press.

For different FABRICS program, there are different default water temperature and cycle process as following:

FABRICS	WATER	CYCLE
	TEMPERATURE	
COTTON	HOT/COLD	WASH+RINSE+SPIN
PERM PRESS	WARM/COLD	WASH+RINSE+SPIN
DELICATES	WARM/COLD	WASH+RINSE+SPIN
KNIT/WOOL	COLD/COLD	WASH+RINSE+SPIN

PRESS DOWN CYCLE BUTTON.

Press the button repeatedly to select the available wash process as following:

WASH+RINSE+SPIN → PREWASH+WASH+RINSE+SPIN → SPIN → RINSE+SPIN

WASH+RINSE

The default cycle is WASH+RINSE+SPIN.

NOTE: Prewash is only available when washing COTTON and PERM PRESS.

PRESS DOWN WASH/RINSE WATER TEMPERATURE BUTTON.

Press down the water temperature selection button, you can choose to inlet cold water or hot water for the wash and rinse process as following:

HOT/COLD → WARM/WARM → WARM/COLD → COLD/COLD

The default water temperature is WARM/COLD.

NOTE: HOT/COLD is only available when washing COTTON and PERM PRESS.

IMPORTANT: A single cold hose system does not allow the washing machine to automatically regulate incoming water temperatures to match those listed on the control panel. Only COLD/COLD can be available.

PRESS DOWN EXTRA RINSE SELECTION BUTTON.

Press down the button when Extra Rinse is needed.

When you choose Extra Rinse, you will see the indicator lights up on the control panel.

NOTE: Extra Rinse is not available for Spin only process.

PRESS DOWN DELAY START SELECT BUTTON.

Press this button repeatedly to choose the delayed start time (From 1 to 24 hours in one hour increment).

After the Delay Start has been chosen, the Delay Start indicator flashes and the LED displays the remaining delay time.

To cancel the Delay Start, press down the power button or press down the Delay Start repeatedly to

choose zero delay start time and press down the Start/Pause button.

PRESS DOWN START/PAUSE BUTTON ONCE AND THE MACHINE WILL BEGIN OPERATION.

Press to start and pause the washing programs.

During operation, time countdown can be seen in LED display.

When the program is finished, open the door and remove the laundry.

NOTE: The door will not open until 3 minutes after the appliance stops or the power turns off. The Door Locked indicator lights whenever the door is locked and unable to open.

NOTE:

- ? Clothes easily discolored should be washed separately so as to prevent inter-dyeing.
- ? If you want to change a selected program, please press the START/PAUSE button first, then press the corresponding buttons to set the program before pushing START/PAUSE button.
- ? When SPIN and RINSE+SPIN cycles are ON, do not use detergent.
- ? If you want to drain water during washing, press the START/PAUSE button, then select SPIN cycle. Press START/PAUSE button again to restart.

∠ DELAY START SETTING

Select this course when you have to go out or do something else.

- ? Press down the power button.
- ? Load the washing machine and select the appropriate wash program.
- ? Press Delay Start button continuously to select the delay start time. (From 1 hour to 24 hours)
- ? Press START/PAUSE button to start the course.

WASHING TIPS AND HINTS

Sort your laundry according to the following characteristics:

- ? Types of fabric care label symbol: Sort laundry into cottons, mixed fibers, synthetics, silks, wools and rayon.
- ? Color: Divide whites and colors. Wash new, colored items separately.
- ? Size: Placing items of different sizes in the same load will improve the washing action.
- ? Sensitivity: Wash delicate items separately, using the delicate wash program for pure new wool, curtains, and silk articles. Check the labels on the items you are washing or refer to the fabric care chart.

EMPTY POCKETS

Coins, safety pins and similar items can damage linen, the washing machine drum, and the water tank.

SECURING FASTENERS

Close zippers and fasten buttons or hooks; Loose belts or ribbons should be tied together.

PREWASHING COTTON

Cotton and Perm Press are not normally necessary. You new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, use a prewash with a protein-based detergent.

DETERMINING LOAD CAPACITY

Do not overload the washing machine or your laundry may not wash properly.

DETERGENT TIPS

The type of detergent you use is based on the type of fabric (cotton, Perm Press, delicates and wool), color, wash temperature, degree and type of soiling. Always use "low suds" laundry soap, which is designed for automatic washing machine.

Follow the detergent manufacturer's recommendations based upon the weight of the laundry, the degree of soiling, and the hard ness of the water in your area. If you don't know how hard your water is, ask your water authority.

NOTE: Keep detergents and additives in a safe dry place out of the reach of children.


Fabric Care Chart


	Resistant material	$\overline{\Box}$	Can be ironed at 100? max
	Delicate fabric	\boxtimes	Do not iron
95 95	Item may be washed at 95?	(A)	Can be dry cleaned using any solvent
60 60 60 60	Item may be washed at 60?	(P)	Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
40 40	Item may be washed at 40?	F	Dry clean with aviation fuel, pure alcohol
30 30	Item may be washed at 30?		or R113 only
	Item may be hand washed	\otimes	Do not dry clean
	Dry clean only	[]	Dry flat
A			Can be hung to day
W	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach	0	Tumble dry, normal heat
~	Can be ironed at 200? max	2	Tumble dry, reduced heat
~	Can be ironed at 150? max		Do not tumble dry

CARE AND MAINTENANCE

EXECUTE CLEANING YOUR APPLIANCE

- ? Clean the surface of your washer regularly with soft fabric.
- ? Clean the inner tub regularly, especially immediately after starch or bleach operation.
- ? Clean the filter in the inlet valve or inlet hose regularly in order to prevent it from clogging.

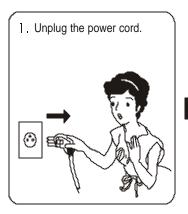

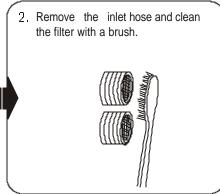

- Clean the surface of the washing machine with a soft cloth regularly.
- Clean the inner tub regularly, especially after washing starched or bleached laundry.

? Clean the detergent drawer.

Pull out the detergent drawer from its housing, clean and rinse it thoroughly. Then dry it and insert back to the correct position.




- ? Clean the pump filter.
 - Clean the debris filter 2 or 3 times a year.
 - 1. Remove the filter cover from the front of the washing machine. And ensure that there is no water in the tub and the electricity supply is disconnected.
 - 2. Place a pan or cloth under the filter cover to prevent water from spilling on your floor.
 - 3. Remove the filter by rotating it half a cycle in the counterclockwise direction and pulling it out.
 - 4. Clean the filter and replace it in its housing reversely.
 - 5. Replace the base cover.







VACATION TIME

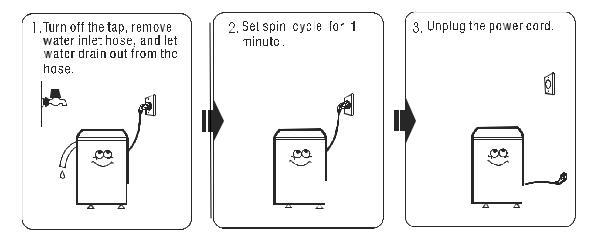

PROBLEMS WITH YOUR APPLIANCE?

You can solve many common appliance problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Washer does not operate.	Not plugged in.
	The circuit breaker tripped or a blown fuse.
	The POWER button is not turned on.
	The door is not closed.
	Make sure the water source is turned on.
No water or insufficient water supply.	The water source faucet is not turned on.
	The water source hose is frozen.
	The water intake hose is bent.
	The filter on the water intake hose is clogged.
Water supplies and drains continuously	The drain hose is not positioned at the correct
	height (0.6 ~ 0.9 m).
The washing machine does not drain.	The drain hose is squashed or bent.
	The water hose mesh filter is clogged.
Detergent remains in the detergent drawer after	The washing machine is running without sufficient
the wash program is complete.	water pressure.
Washing machine vibrates or is too noisy.	Check to assure that the washer is level.
	The shipping bolts were not removed.
	The washing machine is touching another object.
	The laundry load is not balanced.

SERVICE FOR YOUR APPLIANCE

We are proud of our customer service organization and the network of professional service technicians that provide service on your Avanti portable washers. With the purchase of your Avanti portable washer, you can be confident that if you ever need additional information or assistance, the Avanti Products Customer Service Team will be here for you. Just call us toll-free.

AVANTI PRODUCTS CUSTOMER SERVICES

Product Information	Whatever your questions are about our products,
800-323-5029	help is available.
Part Orders	You may order parts and accessories that will be
800-220-5570	delivered directly to your home by personal
	check, money order, Master Card, or Visa.
In-Home Repair Service	An Avanti Products authorized service center will
800-220-5570	provide expert repair service, scheduled at a time
	that is convenient for you. Our trained servicers
	know your portable washer inside and out.

YOUR AVANTI PRODUCTS WARRANTY

Staple your sales receipt here. Proof of original purchase date is needed to obtain service under warranty.

WHAT IS COVERED LIMITED ONE-YEAR WARRANTY

For one year from the date of purchase by the original owner, Avanti Products will, at its option, repair or replace any part of the appliance that proves to be defective in material or workmanship under normal use. During this period Avanti Products will provide all parts and labor necessary to correct such defects free of charge, so long as the appliance has been installed and operated in accordance with the written instructions in this manual. In rental or commercial use, the warranty period is 90 days.

LIMITED 5 YEAR WARRANTY ON PLASTIC TUB

After one year and until five years from date of purchase, Avanti will furnish a replacement plastic tub, for one which is defective in material or workmanship. You will be responsible for labor.


LIMITED 7 YEAR WARRANTY ON STAINLESS STEEL TUB

After one year and until seven years from date of purchase, Avanti will furnish a replacement stainless steel tub, for one which is defective in material or workmanship. You will be responsible for labor.

WHAT IS NOT COVERED

- ? Incidental or consequential damages.
- ? Service calls to:
- ? Correct the installation of your washer.
- ? Instruction on how to use your washer.
- ? Replace house fuses or incorrect house wiring or plumbing.
- ? Repairs performed by unauthorized servicers.
- ? Repairs when your washer is used in other than normal, single-family household use.
- ? Service calls that are related to external problems, such as abuse, misuse, inadequate electrical power, accidents, fire, floods, or acts of God.
- ? Failure of the product if it is used for other than its intended purpose.
- ? Pickup and delivery.
- ? Repairs caused by unauthorized modifications made to the appliance.
- ? This warranty does not apply outside the Continental U.S.A.

WIRING DIAGRAM

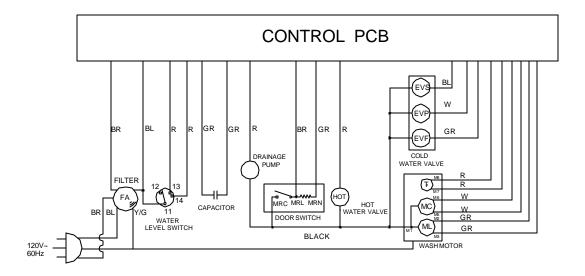

INSTRUCCIONES EN ESPAÑOL

IMPORTANTE: Instrucciones de Seguridad

ADVERTENCIA:

Mientras opera su lavadora automática, y para reducir el riesgo de fuego, descarga eléctrica o daños personales, tenga en cuenta estas precauciones básicas.

Lea todas las instrucciones antes de usar su lavadora automática.

NO LAVE prendas que hayan sido previamente limpiadas, lavadas, remojadas o manchadas con gasolina, solventes para lavado en seco u otras sustancias inflamables o explosivas, ya que estas liberan gases que pueden encenderlas o hacerlas explotar.

NO AÑADA gasolina, solventes para lavado en seco u otras sustancias inflamables o explosivas al agua. Estas sustancias emiten gases que podrían encender o hacer explotar su lavadora automática. Bajo ciertas circunstancias, un sistema de agua caliente que no ha sido usado por más de dos semanas, puede producir gas hidrógeno. El GAS HIDROGENO ES EXPLOSIVO. Si el sistema de agua caliente no ha sido usado por más de dos semanas, abra todas las llaves de agua caliente y deje correr el agua por algunos minutos, antes de usar su lavadora automática. Esta acción liberará el gas hidrógeno que se pueda haber acumulado. Recuerde que este gas es inflamable, no debe fumar ni hacer fuego abierto durante este periodo.

PELIGRO - ADVERTENCIA: Riesgo de niños atrapados.

Niños atrapados o asfixiados no son un riesgo del pasado. Aparatos abandonados o considerados chatarra todavía son peligrosos... aun cuando "estén en el garaje por unos días".

Antes de deshacerse de su lavadora automática antigua: asegúrese de guitarle la tapa.

Nunca deje que los niños operen, jueguen o gateen dentro de la lavadora automática. Es necesario supervisar de cerca a los niños cuando la lavadora automática esta en uso.

No toque el interior de la lavadora automática si la mezcladora o el cilindro interno de lavado están en movimiento.

No instale o almacene esta lavadora automática en un lugar donde esté expuesta a las inclemencias del clima

No fuerce los controles.

No repare ni reemplace ninguna pieza de la lavadora automática, ni trate de realizar mantenimientos salvo los específicamente recomendados en las instrucciones de "Mantenimiento de Usuario" o en las instrucciones de alguna publicación de "Reparación de Usuarios" que usted entienda y se sienta calificado para realizar.

Nunca limpie las piezas de la lavadora automática con líquidos inflamables. El humo puede causar un incendio o una explosión.

No ubique la lavadora automática en una habitación en la que esté directamente expuesta al vapor o a la lluvia. La humedad puede destruir el aislamiento eléctrico aumentando las posibilidades de una descarga eléctrica.

No almacene, ni use gasolina o algún otro líquido o gas inflamable cerca de esta o alguna otra lavadora automática. El humo puede causar un incendio o una explosión.

Si el cable eléctrico esta dañado, deberá ser reemplazado por el fabricante, por la agencia de servicios de este o por una persona calificada para evitar peligros que atenten contra su seguridad.

-GUARDE ESTAS INSTRUCCIONES-

INSTRUCCIONES PARA LA INSTALACION

ANTES DE USAR SU LAVADORA PORTATIL

Quite los empaques exteriores e interiores. Necesitará las siguientes herramientas: Llave inglesa (wrench) Alicate / Pinzas (pliers) Destornillador (screwdriver)

Asegúrese de tener todas estas piezas:

- 2 mangueras de acceso de agua
- 2 adaptadores para grifo
- 4 cubiertas plásticas
- 1 manual de instrucciones

Limpie las superficies internas de la lavadora automática con agua tibia y un paño suave Cuando ubique la lavadora automática asegúrese de dejar un espacio libre, de 2 pulgadas, hacia atrás y hacia los lados.

Coloque la ropa dentro de su lavadora automática de manera uniforme, de lo contrario, podría causar ruido y/o vibración.

No use agua muy caliente (50 C o más). Las piezas plásticas podrían deformarse o dañarse.

Inclusive, la ropa también podría deformarse o desteñirse.

Antes de lavar asegúrese de revisar los bolsillos de las prendas. Los clavos o pernos dejados en los bolsillos podrían dañar la lavadora automática o las prendas durante el proceso de lavado.

No salpique agua sobre el panel de control.

Conecte la lavadora automática a un enchufe de pared (con conexión a tierra). El enchufe de pared deberá ser exclusivo para el uso de la lavadora automática. Bajo ninguna circunstancia, quite la tercera punta (conexión a tierra) del cable eléctrico. Cualquier pregunta que tenga sobre el funcionamiento eléctrico o sobre la conexión a tierra, deberá ser dirigida a un electricista certificado o a un centro de servicio autorizado por Avanti Products.

ELIGIENDO LA UBICACIÓN

Antes de instalar la lavadora automática, elija una ubicación con las siguientes características: Una superficie resistente y plana (si la superficie no es plana, vea "Ajustando las Patas Niveladoras") Un lugar donde los rayos del sol no caigan directamente, estos podrían afectar el recubrimiento acrílico o piezas plásticas o eléctricas de la lavadora automática. Ventilación adecuada.

La temperatura de la habitación no deberá caer por debajo de los 0 C.

Deberá estar alejada de fuentes de calor, tales como carbón o gas.

Asegúrese que la lavadora automática no esté sobre el cable eléctrico.

Cuide que las aberturas de ventilación no estén obstruidas por la alfombra cuando la lavadora automática se haya colocado sobre un piso con este material.

AJUSTANDO LAS PATAS NIVELADORAS

Si el piso no está nivelado, no inserte pedazos de madera u otros objetos, ajuste las patas de la lavadora automática de la siguiente manera:

Desenrosque el tornillo de la pata niveladora hasta que llegue a la altura deseada.

Para fijar la pata en su lugar, enrosque la tuerca con la llave inglesa (Vea Fig. 1)

Ubique la lavadora automática en una superficie resistente.

Si la lavadora automática no es ubicada en una superficie plana o resistente podría causar ruidos y/o vibraciones.

QUITANDO LOS PERNOS DE EMBALAJE

Para asegurar los accesorios que se encuentran suspendidos dentro de la lavadora automática durante su transporte, esta cuenta con cuatro pernos.

Antes de usar su lavadora automática, quite los cuatro pernos de la siguiente manera:

Desenrosque los cuatro pernos con la llave inglesa.

Cuando estén desajustados, hale los pernos por la cabeza.

Tape los cuatro orificios con las cubiertas plásticas que vienen con la lavadora automática.

Guarde los pernos en caso que tenga que transportar la lavadora en el futuro.

CONECTANDO LA MANGUERA DE ABASTECIMIENTO DE AGUA

La manguera de abastecimiento de agua debe estar conectada por un extremo a la lavadora automática y por el otro al grifo de agua.

No estire la manguera de abastecimiento de agua.

Si la manguera no es lo suficientemente larga, y usted no desea mover la llave de agua, reemplace la manguera original por una mas larga. Esta manguera deberá ser de alta presión.

Seleccione una llave de agua adecuada como se indica en las figuras siguientes (vea Fig.2). Si no encuentra ninguna de las llaves mostradas use el adaptador de llave de agua que viene con la lavadora automática.

El tubo terminal de la llave de agua debe tener más de 10mm (0.4") de largo o el conector no funcionará correctamente, esto podría producir fugas de agua.

Conecte la manguera de abastecimiento de agua a los conectores que se encuentran en las válvulas de entrada de agua de la lavadora automática, para esto tendrá que girar las tuercas conectoras. Conecte el otro extremo de la manguera de abastecimiento de agua al grifo girando las tuercas conectoras.

Si usted tiene un sistema de grifos de agua caliente y fría, asegúrese de conectar la manguera que sale de la válvula de entrada de agua caliente con la llave de agua caliente y la de entrada de agua fría con la llave de agua fría. (Vea Fig.2).

NOTA: Asegúrese que los aros de jebe estén dentro de las tuercas conectoras.

CONEXIÓN DE AGUA

Para un grifo de cocina standard, conecte su manguera de abastecimiento a la válvula de entrada de agua fría.

Conecte la manguera de abastecimiento al adaptador de rosca "macho" girándola en dirección de las manillas del reloj hasta que esté bien enroscado.

Asegúrese de haber colocado el aro de jebe entre la manguera de abastecimiento y el adaptador de rosca "macho". Luego, conecte la manguera al grifo firmemente.

NOTA: Algunos grifos pueden requerir el uso de un adaptador de rosca "hembra" entre el adaptador "macho" y la llave del lavadero. En ese caso, asegúrese que el aro de jebe esté colocado entre ambos adaptadores.

El siguiente grafico le explicará el procedimiento. (Fig.2A).



Si tiene un problema de fuga de agua en la llave o en la válvula de entrada de la lavadora automática, cierre el ingreso de agua y ajuste firmemente las conexiones con una llave inglesa.

Tenga cuidado de no ajustar excesivamente las piezas, esto podría dañar las conexiones de agua. Finalmente, abra la llave del agua y verifique que no existan mas fugas de agua.

UBICANDO LA MANGUERA DE DESAGUE

El extremo final de la manguera de desagüe deberá estar ubicado en una de las siguientes posiciones:

Sobre el borde del fregadero
La manguera de desagüe deberá estar ubicada a una altura de entre 2 a 3 pies (60 a 90 cm).
Para mantener la forma curva de la manguera de desagüe, use la guía plástica para mangueras que viene con la lavadora automática. Asegure la guía a una pared con un gancho o al grifo con una soguilla, de esta manera evitará que la manguera de desagüe se mueva de su sitio.

? En un tubo de desagüe Le recomendamos usar un tubo vertical con una altura de entre 2 a 3 pies (60 a 90 cm). El diámetro interior del tubo de desagüe debe ser mayor al diámetro externo de la manguera de desagüe.

NOTA: El extremo final de la manguera de desagüe deberá estar a una altura de entre 2 a 3 pies (60 a 90 cm) sobre el nivel del piso, de lo contrario, la lavadora automática no funcionará adecuadamente.

FIG. 2B



CONEXIÓN ELECTRICA

CUIDADO

El uso inapropiado del cable con conexión a tierra aumenta las probabilidades de una descarga eléctrica. Si el cable está dañado, hágalo reemplazar por un centro de servicio autorizado por Avanti Products.

Esta lavadora automática deberá tener una conexión a tierra apropiada para no comprometer su seguridad.

El cable eléctrico de esta lavadora está equipada con un enchufe de tres puntas. Este enchufe encaja perfectamente con los enchufes de pared Standard de tres entradas, de esta manera reducirá la posibilidad de una descarga eléctrica.

Por ningún motivo corte o retire la tercera punta del enchufe del cordón eléctrico de la lavadora automática.

Esta lavadora requiere un enchufe eléctrico de tres entradas de 110 a 120 voltios y 60Hz A.C.

El cordón eléctrico deberá permanecer asegurado a la parte posterior de la lavadora automática, no deberá estar expuesto o colgando para evitar una lesión accidental.

Nunca desenchufe la lavadora automática tirando del cordón eléctrico. Siempre tome el enchufe y hale de él para desenchufar la lavadora.

No use una extensión con esta lavadora. Si el cable eléctrico es corto, contrate un electricista calificado y haga instalar un enchufe cerca de la lavadora.

USANDO SU LAVADORA PORTATIL

PANEL DE CONTROL

- 1. Dispensador de detergente
- 2. Panel de exhibición
- 3. Botón de selección de INICIO RETARDADO
- 4. Botón de selección de enjuague
- 5. Botón de selección de temperatura del agua
- 6. Botón de selección de ciclo de lavado
- 7. Botón de selección de tela
- 8. Botón de selección inicio/pausa
- 9. Botón de encendido

PREPARACION

- 1. Conecte la manguera de abastecimiento de agua al grifo.
- 2. Abra la llave del agua.
- Si la presión del agua es menor a 0.05MPa y mayor a 0.5MPa, no encienda la lavadora.
- 3. Por su seguridad, conecte la lavadora solo a un enchufe con conexión a tierra.
- 4. Coloque la manguera de desagüe en la posición correcta.
- 5. Abra la puerta de la lavadora automática e introduzca y ubique las prendas a lavar de manera uniforme. Cierre la puerta.
- 6. Abra el cajón del dispensador de detergente, añada el detergente l íquido y el suavizante de la siguiente manera:
 - (1) para el detergente del pre-lavado
 - (2) para el detergente del lavado
 - (3) para el suavizante

Cuando use detergente liquido (recomendado para programas sin proceso de pre-lavado), añada el recipiente para detergente liquido y siga las instrucciones que aparecen en el empaque.

ADVERTENCIA

Cuando use blanqueador líquido siga los siguientes pasos. De no seguir estas indicaciones podría dañar la ropa.

- 1. Coloque las prendas a lavar dentro de la lavadora 2. Encienda la lavadora y seleccione el tipo de lavado 3. Añada detergente o jabón líquido 4. Espere 3 minutos después que el ciclo de lavado haya empezado. Luego mida la cantidad correcta de blanqueador líquido (sin exceder 1/3 de taza) de lo contrario podría dañar la ropa.
- 5. Abra el cajon y vierta el blanqueador líquido en la sección central del cajón (II) 6. No vierta blanqueado líquido sin diluir directamente en la ropa o el cilindro de lavar

Cuando use detergente en polvo, recuerde que deberá quitar el recipiente para detergente líquido.

NOTA: NO llene los recipientes de detergente y suavizante hasta el tope, ello causará que estos se desborden.

7. Empuje el cajón dispensador de detergente hasta cerrarlo completamente.

ADVERTENCIA: NO abra el cajón dispensador mientras la lavadora automática esté en funcionamiento, esto podría causar que el agua se derrame.

INSTRUCCIONES DE FUNCIONAMIENTO

PRESIONE EL BOTON DE ENCENDIDO (POWER)

Presiónelo una vez para encender la lavadora automática, presiónelo nuevamente para apagarla. Si el ciclo de lavado ha terminado, la lavadora se apagará automáticamente.

NOTA: Si la máquina está encendida por 10 minutos, y no se escoge ninguna opción (mediante los botones de selección) esta se apagará automáticamente.

PRESIONE EL BOTON PARA SELECCIONAR EL TIPO DE TELA (FABRICS)

Seleccione el programa tomando en consideración las prendas a lavar: ALGODÓN – PLANCHADO PERMANENTE – DELICADOS – TEJIDOS DE PUNTO/LANA El programa pre-seleccionado es PLANCHADO PERMANENTE.

Cada programa tiene un ciclo de lavado y una temperatura de agua especifico:

TIPO DE TELA	TEMPERATURA DEL AGUA	CICLO
ALGODÓN	CALIENTE / FRIA	LAVADO+ENJUAGUE+CENTRIFUGADO
PLANCHADO PERM	TIBIA / FRIA	LAVADO+ENJUAGUE+CENTRIFUGADO
DELICADOS	TIBIA / FRIA	LAVADO+ENJUAGUE+CENTRIFUGADO
TEJ. PTO/LANA	FRIA / FRIA	LAVADO+ENJUAGUE+CENTRIFUGADO

SELECCIONAR EL CICLO DE LAVADO (CYCLE)

Presione el botón de selección de ciclo repetidamente, el orden de los ciclos es el siguiente: LAVADO + ENJUAGUE + CENTRIFUGADO > PRELAVADO +LAVADO +ENJUAGUE + CENTRIFUGADO > CENTRIFUGADO > ENJUAGUE + CENTRIFUGADO > LAVADO + ENJUAGUE

El ciclo de lavado pre-seleccionado es LAVADO+ENJUAGUE+CENTRIFUGADO

NOTA: El PRELAVADO podrá ser escogido sólo si es que ha seleccionado los siguientes tipos de tela: ALGODÓN y PLANCHADO PERMANTENTE.

SELECCIONAR LA TEMPERATURA DEL AGUA PARA EL CICLO LAVAR/ENJUAGAR (WASH/RINSE WATER TEMPERATURE)

Presione el botón de selección de temperatura del agua, usted puede elegir la temperatura del agua para el proceso de lavado y enjuague de la siguiente manera:

CALIENTE/FRIA >

TIBIA/TIBIA >

TIBIA/FRIA >

FRIA/FRIA

La temperatura pre-seleccionada de fábrica es TIBIA/FRIA.

NOTA: La temperatura CALIENTE/FRIA podrá ser escogida sólo si es que ha seleccionado los siguientes tipos de tela: ALGODÓN y PLANCHADO PERMANTENTE.

IMPORTANTE: Si usted usa el sistema de una sola manguera de abastecimiento de agua (fría), la máquina no podrá regular la temperatura del agua tal y como se muestra en el panel de control. En este caso sólo se podrá usar la opción FRIA/FRIA.

SELECCIONAR LA OPCION ENJUAGUE ADICIONAL (EXTRA RINSE)

Presione este botón cuando la carga requiera un enjuague adicional.

Cuando escoja esta opción, vera que la luz indicadora se enciende en el panel de control.

NOTA: La opción ENJUAGUE ADICIONAL no está disponible cuando se eligió solamente el proceso CENTRIFUGADO.

SELECCIONAR LA OPCION INICIO RETARDADO (DELAY START)

Presione este botón repetidamente para elegir aplazar el inicio del proceso (de 1 a 24 horas, en

incrementos de 1 hora).

Después de haber escogido la hora de inicio, el indicador de INICIO RETARDADO se encenderá y apagará repetidamente: además, la pantalla LED indicará el tiempo restante.

Para cancelar el INICIO RETARDADO:

Presione el botón de ENCENDIDO

Presione el botón de INICIO RETARDADO repetidamente hasta que el contador llegue a 0 (cero), luego, presione el botón INICIO/PAUSA.

PRESIONE EL BOTON INICIO/PAUSA UNA VEZ Y LA LAVADORA COMENZARA A FUNCIONAR (START/HOLD)

Al presionar este botón usted iniciará o hará una pausa en los programas de lavado.

Mientras la lavadora esté funcionando, el tiempo restante (para terminar el proceso) se podrá ver en la pantalla LED.

Cuando el programa termine, abra la puerta de la lavadora y saque sus prendas.

NOTA:

La puerta no abrirá sino hasta después de 3 minutos de haber terminado el proceso o haber apagado la lavadora (presionando el botón de encendido – POWER)

Cuando el programa haya terminado, abra la puerta y retire las prendas.

NOTA:

- ? Las prendas que destiñen fácilmente, se deben lavar por separado, así evitará que manchen otras prendas.
- ? Si usted desea cambiar un programa seleccionado, haga lo siguiente
- ? Presione el botón INICIO/PAUSA
- ? Presione los botones correspondientes al nuevo programa
- ? Presione el botón INICIO/PAUSA
- ? Cuando los ciclos CENTRIFUGADO o ENJUAGUE+CENTRIFUGADO estén activos, no use detergente.
- ? Si usted desea drenar agua durante el ciclo de lavado, haga lo siguiente:
- ? Presione el botón INICIO/PAUSA, luego seleccione el ciclo CENTRIFUGADO

Presione el botón INICIO/PAUSA para reiniciar el lavado

PROGRAMANDO EL INICIO RETARDADO (DELAY START)

Elija esta opción cuando tenga que salir o tenga otra cosa que hacer.

- ? Presione el botón de ENCENDIDO
- ? Cargue la lavadora automática con las prendas y seleccione el programa de lavado apropiado
- ? Presione este botón repetidamente para aplazar el inicio del proceso (de 1 a 24 horas, en incrementos de 1 hora).
- ? Presione el botón INICIO/PAUSA para iniciar este programa (el conteo regresivo aparecerá en la pantalla LED)

CONSEJOS DE LAVADO

Separe sus prendas de acuerdo a las siguientes características:

- ? Tipo de tela: Algodón, tela mixta, sintética, seda, lana o rayón
- ? Tipo de Cuidado requerido durante el lavado
- ? Color: Separe las prendas blancas de las de color. Lave las prendas nuevas de color por separado
- ? Tamaño: Lavar prendas de distinto tamaño mejora los resultados del lavado
- ? Sensibilidad: Lave prendas delicadas por separado, use el programa de lavado DELICADO para prendas de "pura lana nueva", seda y cortinas.
 - Revise las etiquetas de las prendas que va a lavar o remítase a la cartilla de cuidado según

el tipo de tela en este manual.

VACIE LOS BOLSILLOS

Monedas, alfileres de seguridad u otros artículos metálicos pueden dañar telas como el lino, el cilindro de la lavadora y el tanque de agua.

CUIDADO CON LOS SUJETADORES

Asegure las cremalleras, botones y ganchos de las prendas. Las correas no deben estar sueltas y los lazos deben estar atados.

PRELAVANDO PRENDAS DE ALGODÓN

Normalmente los programas de lavado ALGODÓN y PLANCHADO PERMANTENTE no son necesarios. Su nueva lavadora automática combinada con los detergentes modernos le dará unos resultados de lavado perfectos, de la misma manera le ahorrarán de energía, tiempo, agua y detergente.

Sin embargo, si su prenda de algodón está particularmente sucia, use el ciclo de prelavado con un detergente en base a proteínas.

DETERMINE LA CAPACIDAD DE CARGA

No sobrecarque la lavadora automática, si lo hace, esta no lavará apropiadamente.

CONSEJOS SOBRE EL DETERGENTE A USAR

El detergente que use debe ser apropiado para el tipo de tela de las prendas a lavar (algodón, planchado permanente, delicados y lana), el color, la temperatura de lavado, el grado y tipo de manchas.

Siempre use un jabón de lavado de poca espuma, diseñado para lavadoras automáticas. Siga las recomendaciones del fabricante de detergente respecto al peso de la carga, el grado de suciedad, y la dureza del agua en su zona. Si no sabe este dato, diríjale esa pregunta a su autoridad pertinente.

NOTA: Mantenga el detergente y otros aditivos de limpieza en un lugar seco y fuera del alcance de los niños.

CARTILLA DE CUIDADO SEGÚN EL TIPO DE TELA (vea pag.15)

Material resistente Puede ser planchado (100 C máx.)

Tela delicada No planchar

La prenda se debe lavar a 95 C Lavar en seco con cualquier solvente

La prenda se debe lavar a 60 C Lavar en seco con percloruro, combustible

para encendedor, alcohol puro o R113 Lavar en seco con combustible de avión,

alcohol puro o R113

La prenda se debe lavar a 30 C No lavar en seco

Secar sobre superficie plana

Blanqueador solo con agua fría Se puede colgar

No usar blanqueador Colgar en un perchero
Puede ser planchado (200 C máx.) Secar a temperatura regular
Puede ser planchado (150 C máx.) Secar a temperatura reducida

No usar secadora de ropa

CUIDADO Y MANTENIMIENTO (vea pg.16)

La prenda se debe lavar a 40 C

La prenda se puede lavar a mano

? Limpie regularmente la superficie exterior de su lavadora automática con un paño suave.

- ? Limpie regularmente el cilindro interior de la lavadora, especialmente después de haber usado almidón o blanqueador.
- ? Limpie el filtro que se encuentra dentro de la válvula de suministro de agua o la manguera de abastecimiento, de esta manera prevendrá obstrucciones.
 - 1. Desconecte el enchufe
 - 2. Retire la manguera de abastecimiento y limpie el filtro con un cepillo
 - 3. Limpie el cajón dispensador del detergente.
 - 4. Remueva el cajón dispensador de su casillero, límpielo profundamente y enjuaguelo. Séquelo e introdúzcalo en nuevamente en su sitio.
- ? Limpie el filtro de la bomba.
- ? Limpie el filtro 2 o 3 veces al año.
 - Quite el cobertor del filtro que se haya en la parte delantera de la lavadora automática. Asegúrese que no queda agua en el cilindro de la lavadora y que el enchufe está desconectado.
 - Ponga un recipiente o un paño debajo del cobertor del filtro para prevenir que el agua se derrame en el suelo.
 - 3. Quite el filtro girándolo media vuelta (en sentido antihorario) y halándolo.
 - 4. Limpie el filtro y póngalo nuevamente en su lugar.
 - 5. Coloque nuevamente el cobertor del filtro en su sitio.

DURANTE LAS VACACIONES

- 1. Cierre la llave del agua, desconecte la manguera de abastecimiento de agua y deje que el agua drene de la misma.
- 2. Haga funcionar la lavadora por un minuto en el ciclo centrifugado.
- 3. Desconecte el cordón eléctrico.

PROBLEMAS CON SU LAVADORA PORTATIL?

Usted puede resolver fácilmente algunos problemas de su lavadora, de esta manera se ahorrará el costo de una posible reparación. Intente resolver los problemas de su aparato con las siguientes sugerencias antes de llamar a un técnico.

PROBLEMA CAUSA POSIBLE La lavadora no funciona. No está enchufada.

Hubo un corto circuito o un fusible voló. El botón de encendido está apagado.

La tapa no está cerrada.

Asegúrese que la llave de agua esté abierta.

No hay agua o el nivel de

agua es muy bajo.

La llave de agua no está abierta.

La manguera de abastecimiento está congelada. La manguera de abastecimiento está doblada.

El filtro de la manguera está obstruído.

El nivel de agua sube y baja continuamente.

La manguera de drenaje no está ubicada a la altura

correcta (entre 2 y 3 pies).

La lavadora no desagua. La manguera está doblada.

El filtro de la manguera está obstruído.

Queda detergente en el cajón La lavadora está funcionando sin la suficiente presión de después que terminó el lavado. aqua.

La lavadora vibra o hace mucho Verifique que la lavadora esté nivelada.

ruido. Los pernos de transporte no se quitaron.

La lavadora está tocando otro objeto. La carga de prendas no está balanceada.

SERVICIO PARA SU LAVADORA

Estamos orgullosos de la organización de nuestro servicio al cliente y de los técnicos profesionales que proveen servicio a su lavadora automática Avanti. Cuando compra un producto Avanti, usted puede estar seguro que si alguna vez necesita información o asistencia, el equipo de servicio al cliente de Avanti Products estará ahí para ayudarlo. Llámenos de manera gratuita.

SERVICIO AL CLIENTE DE AVANTI PRODUCTS

Información de producto 800-323-5029

Cualquier sea su pregunta sobre nuestros productos, la ayuda está disponible.

Pedido de piezas 800-220-5570 Usted puede ordenar piezas y accesorios que serán enviados directamente a su casa con cargo a un cheque personal, Giro Postal, Ordenes de dinero, Mastercard o Visa.

Servicio de reparación a domicilio

Un centro de servicio autorizado de Avanti Products le proveerá de un servicio de reparación experimentado, este será programado a la hora que le sea más conveniente. Nuestro equipo de servicio está totalmente entrenado y conocen su lavadora por dentro y fuera.

PRINTED IN CHINA